


HOW TO DRESS YOUR DOORS

Front doors

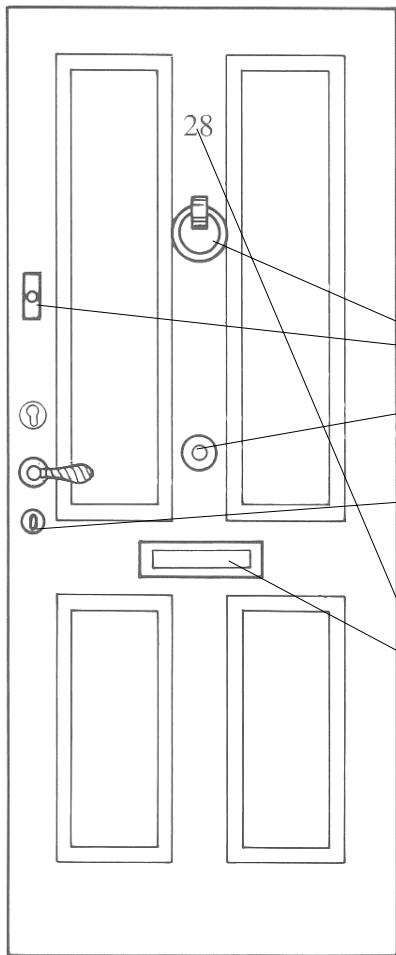

1. Hinges: (page 52), stainless steel or plated brass with phosphor bronze washers. Number of hinges is dependant on weight of door. We always recommend a minimum of 3 hinges per door leaf, for heavy doors please specify 4 hinges.
2. Security hinge bolt set into door frame to prevent removal of door if hinge pins are removed. Very important if the hinge knuckle is visible from outside.
3. Either door bell (page 33) or door knocker (page 24).
4. Either centre door knob (page 24) for pulling door to, or cylinder pull (page 24) if using night latch.
5. Either, British Standard 5 lever or Euro profile cylinder sash lock (page 54) with pair of door levers. For additional security we also advise fitting a 5 lever or Euro profile cylinder deadlock, above or below the sash lock. Order escutcheons to suit door levers.
6. Letter plate, sprung and recessed. Fitted with an internal flap on the inside face of the door to cut down on draughts etc (page 24).
7. Door numerals and letters (page 24).
8. If your door has a multi point lock please let us know as we can supply levers to suit.

Inside front door


1. Door stop either floor or wall mounted (page 24).
2. Surface mounted or flush lever bolts (page 24) for additional security. Essential for the inactive leaf of a pair of doors.

Safety and Security

In order to overcome issues of fire safety against security we would advise fitting a BS3621 euro profile sashlock (Z1011, page 54) along with a euro profile deadlock (Z1010, page 54) fitted with an internal thumb turn (ZC3003, page 54). The door should be locked with the thumb turn when inside the house and when the house is vacant it can be key locked. In the event of a fire a quick exit can be made by simply unlocking the door with the thumb turn.

We do not recommend using the following finishes externally – Dark Bronze, Polished Nickel, Maple, Oak, Leather. If ordering Polished Brass we recommend un-lacquered which will age evenly. Virtually all lacquers will eventually break down especially with exterior use. Our other plated finishes and all composite finishes are suitable for exterior or interior use.

If door is glazed please specify stile width when ordering.

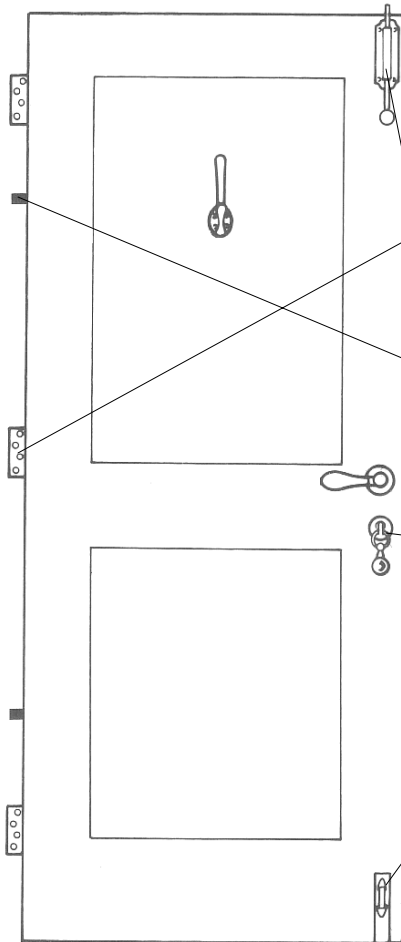

Back doors

1. Hinges: (page 52), stainless steel or plated brass with phosphor bronze washers. Number of hinges is dependant on weight of door. We always recommend a minimum of 3 hinges per door leaf, for heavy doors please specify 4 hinges.
2. Security hinge bolt set into door frame to prevent removal of door if hinge pins are removed. Very important if the hinge knuckle is visible from outside.
3. Either, British Standard 5 lever or Euro profile cylinder sash lock (page 54) with pair of door levers. Order escutcheons to suit door levers.
4. Surface mounted or flush lever bolts (page 24) for additional security. Fitted top and bottom of door.
5. Optional door stop, coat hook etc (all page 24).
6. If your door has a multi point lock please let us know as we can supply levers to suit.


Tips

We do not recommend using the following finishes externally – Dark Bronze, Polished Nickel, Maple, Oak, Leather. If ordering Polished Brass we recommend un-lacquered which will age evenly. Virtually all lacquers will eventually break down especially with exterior use. Our other plated finishes and all composite finishes are suitable for exterior or interior use.

If door is glazed please specify stile width when ordering.

Turnstyle can match key rings to most door handles. Not only does this look good when left in the door but it also helps to identify the key to door. Do not leave keys in glazed doors.

French windows / double doors

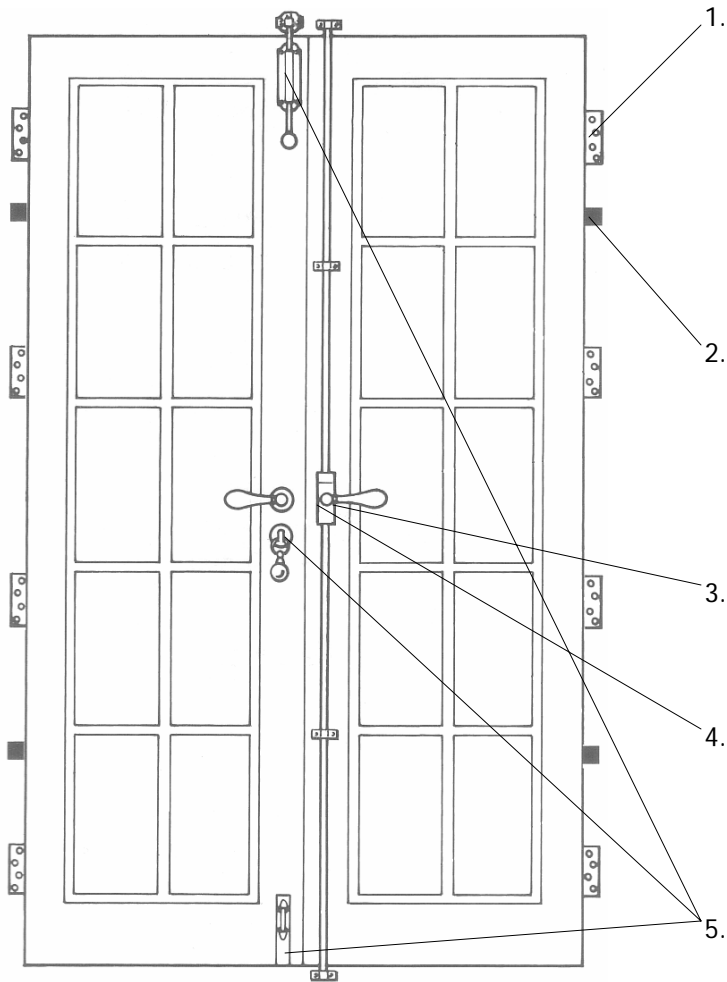

1. We recommend 4 hinges per door, especially with French doors (additional weight from glazing). Hinges finished to match door furniture, either stainless steel or plated brass. Possibly parliament or projection hinges if door is required to open back against a wall (see page 52). Always confirm door weight before ordering hinges.
2. Security hinge bolt set into door frame to prevent removal of door if hinges are removed. Very important if the hinge knuckle is visible from outside. Also mortice security bolt (page 55) for additional security.
3. Either, pair of espagnolette bolts (page 25), 5 lever locking style or with locking blocks if standard type. Please specify door height when ordering.
4. Or, single espagnolette bolt (page 25) fitted on the active leaf with a dummy pair of levers in conjunction with surface or flush bolts on the inactive leaf.
5. Or, British Standard 5 lever or euro profile cylinder sash lock (page 54) in conjunction with a pair of levers, fitted to the active leaf. Surface mounted or flush bolts (page 24) fitted top and bottom of inactive leaf (longer bolt generally fitted at top of door). Dummy levers also on inactive leaf.
6. Silent cabin hooks (page 24) fitted externally to hold doors open.
7. If your door has a multi point lock please let us know as we can supply levers to suit.

Tips

We do not recommend using the following finishes / materials externally – Dark Bronze, Polished Nickel, Maple, Oak, Leather. If ordering Polished Brass we recommend un-lacquered which will age evenly. Virtually all lacquers will eventually break down especially with exterior use. Our other plated finishes and all composite finishes are suitable for exterior or interior use.

To maximize light, most French doors have narrow stiles (edge of door where the handles are fitted). We always advise fitting door levers to avoid scraping knuckles. To ensure lock / latch will be compatible please specify the stile width when ordering.

Turnstyle can match key rings to most door handles. Not only does this look good when left in the door but it also helps to identify the key to door. Do not leave keys in glazed doors.

Bathroom doors

1. Either mortice bathroom lock (page 55) with door handle and matching snib / thumbturn. We recommend the 72mm centre bathroom lock (Z1021 72) as this gives more clearance between the handle and the thumbturn.
2. Or, tubular mortice latch (page 55) with pair of levers in conjunction with tubular bolt (page 55) and snib / thumbturn to match levers. This option allows you to space the levers and turn as you require.
3. Or, push button privacy set of door levers. A clever variation of the tubular latch that locks when a privacy pin (on rose) is pushed in. The lock releases when the internal door lever is depressed, it can also be released from the outside in emergencies. A discreet system that is easy to install. See pages 5, 6, 7, 9 and 10 of brochure for design options. Privacy latches have a 60mm backset.
4. Optional, door stops, robe hooks for the inside of the door (pages 24 and 50).
5. Inside, match door furniture with bathroom fittings (pages 47 to 51) and window fittings (pages 26 and 27) by finish and design. If keeping existing taps these may dictate the metal finish of your door and window hardware.

Tips

For more commercial applications we can supply a thumbturn and release complete with external indicator.

You can split finishes and designs on either side of a door, i.e Satin Nickel externally, Bright Chrome (to match taps) internally. Be sure to specify the handing if ordering door levers.

Door knobs are not ideal for bathroom doors as they may be difficult to operate with wet hands.

Other internal doors

1. Pair of door levers or knobs fitted in conjunction with either a mortice tubular latch, box latch (not suitable for knob sets) or lock. If using locks it is not necessary to order British Standard grade for internal doors. Don't forget to order escutcheons to cover the keyholes.
2. We recommend at least 3 hinges, evenly spaced, per door leaf. This helps with stability and is more secure in the event of a fire.
3. Door stops, either floor or wall mounted (page 24), will protect walls and door furniture.

For double doors you will need the above plus –

1. An extra dummy pair of door levers or knobs to achieve a balanced appearance.
2. Rebate set for latch or lock if door is rebated.
3. Surface mounted or flush lever bolts (page 24) fitted top and bottom of the inactive door leaf. Longest bolt is normally fitted at the top of the door.
4. An extra door stop (page 24).

General door dressing tips

Try and keep metal finish consistent on each door, from hinge to handle to strike plates etc.

We do not recommend using the following finishes externally – Dark Bronze, Polished Nickel, Maple, Oak, Leather. If ordering Polished Brass we recommend un-lacquered which will age evenly. Virtually all lacquers will eventually break down especially with exterior use. Our other plated finishes and all composite finishes are suitable for exterior or interior use.

If decorating or painting, remove door furniture and allow paint to dry thoroughly before replacing.

Follow fitting instructions carefully to ensure best results from handles and associated furniture.

Measure twice cut once!

Please do not hesitate to contact us if you have any questions or require assistance.